

# GrandStand Retractable Banner Stand



## Features

- Material: aluminum.
- Graphics well protected in base during transportation.
- Graphics interchangeable, using a cassette system.
- Colors available: black/silver
- Padded nylon carrying bag with shoulder strap and plastic window.
- Unit floor adjustable with 2 set screws on the bottom.



## Includes


- Aluminum base.
- Top profile with panel attachment strip.
- Tri-fold aluminum pole.
- Gray padded nylon bag with black trim.
- Single cardboard box.

## Accessories

- Light Fixture (50W, halogen, MR16)



**Aluminum Base**

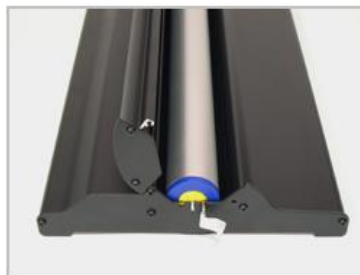

**Graphic roller**



**Floor adjustable**

The information in this brochure is subject to change without notice. Any questions, please contact Drytac at [info@drytac.com](mailto:info@drytac.com), 5383 Glen Alden Drive, Richmond, Virginia 23231, USA. TOLL FREE US: 800-280-6013 Tel. 804-222-3094 Fax 804-226-2330

[www.drytac.com](http://www.drytac.com)

# GrandStand – Retractable Banner Stand




## Specifications: GrandStand (Single-Sided – Black/Silver)

Description	Graphic visible size	Graphic total size	G.W. per unit	Qty per Ctn.	Dimension per Ctn.	G.W. per Ctn.
GrandStand	33 3/8" w x 84 1/2" h 850 x 2150 mm	33 3/8" w x 91" h 850 x 2310 mm	10.14 lbs 4.60 Kg	5 pcs	10.6" x 18.5" x 36.5" 270 x 470 x 930 mm	56.2 lbs 25.5 Kg
	39 3/8" w x 84 1/2" h 1000 x 2150 mm	39 3/8" w x 91" h 1000 x 2310 mm	11.24 lbs 5.10 Kg	5 pcs	10.6" x 18.5" x 41.2" 270 x 470 x 1050 mm	63.9 lbs 29 Kg

### Artwork Guidelines

Top bleed: 0

Bottom bleed: 6 3/8" (162 mm)

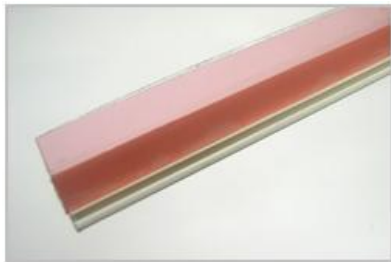


Panel strip with self adhesive tape

Width: 3/4" (20 mm)



Profile with panel strip attached

### Graphic Specifications

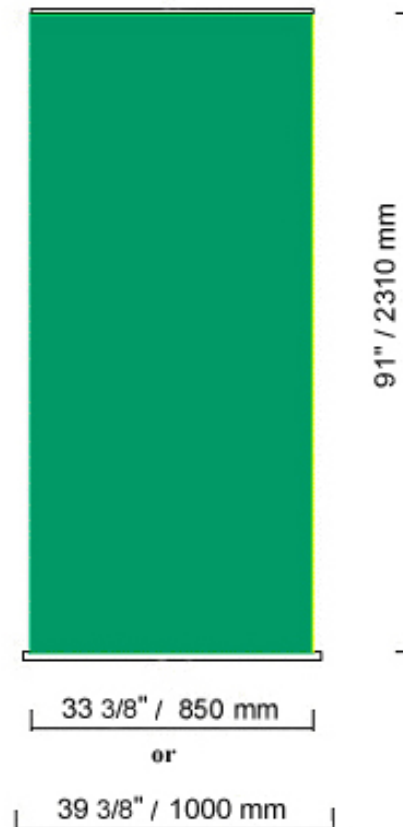

Total graphic size:


33 3/8" x 91" (850mm x 2310mm)

39 3/8" x 91" (1000mm x 2310mm)

The information in this brochure is subject to change without notice. Any questions, please contact Drytac at [info@drytac.com](mailto:info@drytac.com), 5383 Glen Alden Drive, Richmond, Virginia 23231, USA. TOLL FREE US: 800-280-6013 Tel. 804-222-3094 Fax 804-226-2330

[www.drytac.com](http://www.drytac.com)


## Installation Instructions --- GrandStand

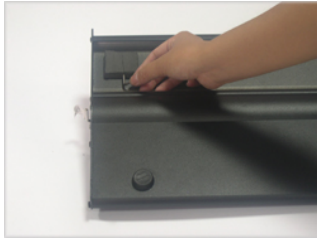


Step 1. Get the hexagonal key from underneath the base.




Step 2. Remove the hexagonal screws with the key.(both sides)

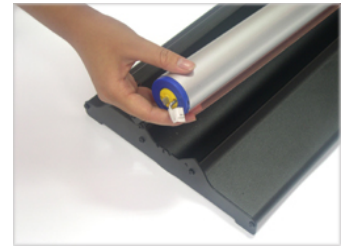


Step 3. Open the lid and remove the graphic roller.

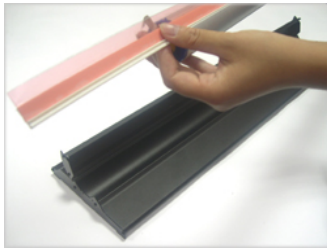


Step 4. Pull out the panel strip from the graphic roller.

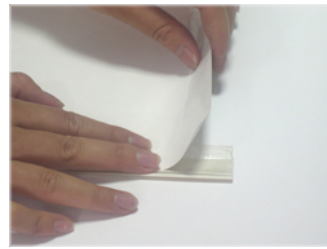


Step 5. Remove the liner on the front tape and press the graphic on the panel strip. Do the same to the top panel strip (squarely).

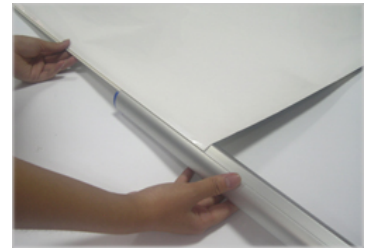


Step 6. Insert the bottom panel strip back into the graphic roller.

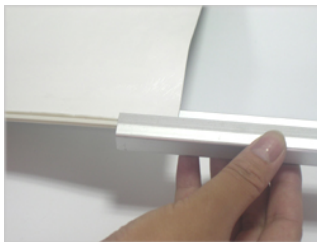


Step 7. Insert the top panel strip into the top profile. Center and secure the graphic with a piece of clear tape on the back to keep the graphic from sliding.

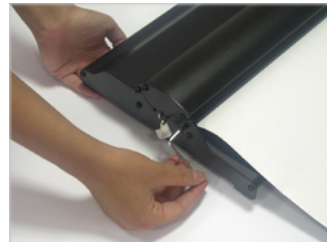

Step 8. Put the graphic roll back into the base and secure the lid with the hexagonal key on both sides.

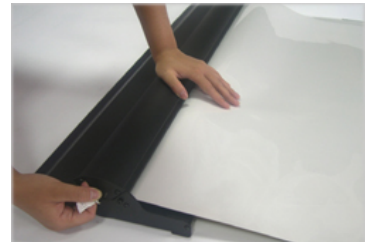

Step 9. Pull out the locking key and roll the graphic slowly into the base. Gently hold on to the graphic to keep it from retracting too fast.

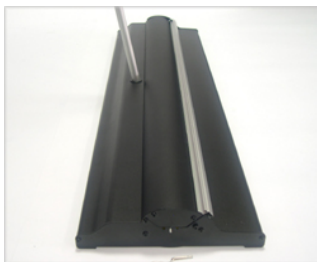

Step 10. Insert the pole into the base.



Step 11. Pull out the graphic from the base and keep one foot on the base to prevent it from pulling up.




Step 12. Insert the top into the top profile. Installation is now completed.

The information in this brochure is subject to change without notice. Any questions, please contact Drytac at [info@drytac.com](mailto:info@drytac.com), 5383 Glen Alden Drive, Richmond, Virginia 23231, USA. TOLL FREE US: **800-280-6013** Tel. 804-222-3094 Fax 804-226-2330

[www.drytac.com](http://www.drytac.com)

## How to re-tension the spring on the GrandStand

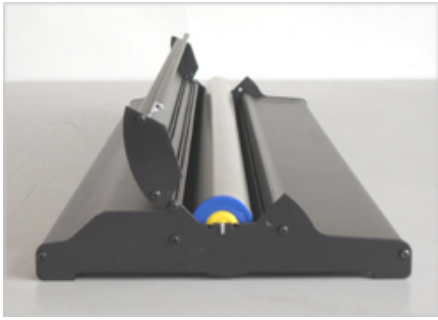

Step 1. Remove the 2 hex screws (one on each side) with the hex key and open the lid.




Step 2. Set the base unit against the edge of a table so that it cannot move backwards.



Step 3. Remove the roller from the base and insert the flat end of the shaft axle into the suited opening with the shaft being outside of the base unit.




Step 4. Turn the roller in the direction of the arrow on the blue ring until it cannot go any farther. Let it go back 3-4 turns.

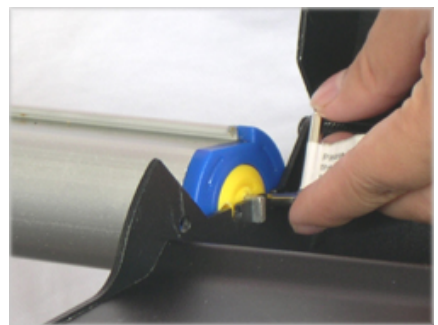

Step 5: Find the hole on the roller and insert the hex key to lock the spring. The roller is now ready.



Step 6: Lift up the roller and put it back into the base. There is only one way it will fit.

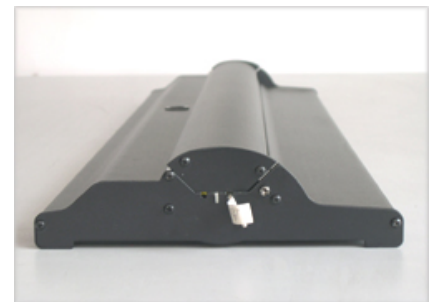

Step 7: Close the lid and reattach the screws

The re-tensioning process is complete.  
Please call us if you have any questions.

