
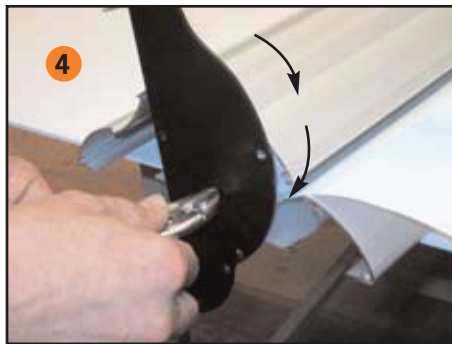
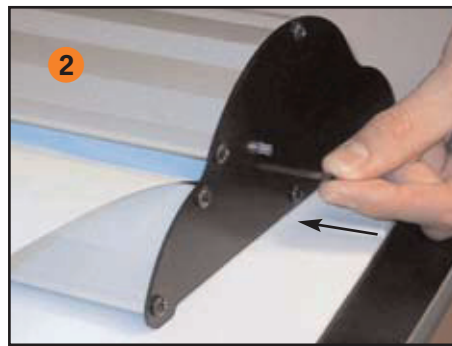


BANNERBUG RE-TENSION INSTRUCTIONS

Instructions

- 1 With the system facing you, remove left hand end cap, using a Phillips head Screwdriver to expose the reel, with leader strip protruding out of the system. **WARNING: Take care when removing the end cap, the reel may not be totally unwound and may cause the end cap to spin quickly and may be dangerous.**
- 2 Place the pin into the right hand end cap. Rotate reel until the hole in the reel lines up with the hole in the end cap. Place the Allen key to stop the reel from rotating.
- 3 Position the left hand end plate onto the system so that the flat metal bar of the reel protrudes from the slot in the end cap. Grip the flat bar with a vice grip.
- 4 Rotate the flat bar clockwise. The table below indicates the number of rotations required for different size Bannerbugs.
- 5 Replace the screws in the left hand end cap.

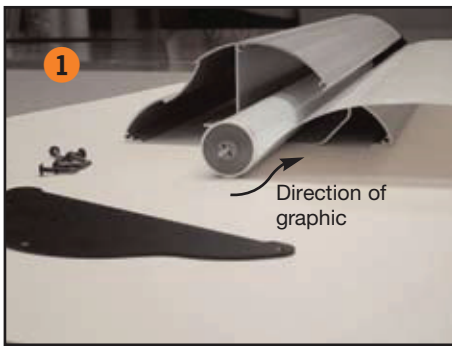

From 1st September 2009

BANNER SYSTEM		No of turns	BANNER SYSTEM		No of turns
Desk Bug	8 11/16" / 22cm	7	47in. Bug	47 1/4" / 120cm	23
Baby Bug	22 13/16" / 58cm	15	59in. Bug	59 1/6" / 150cm	30
33in. Bug	33 7/16" / 85cm	21	72in. Bug	72 3/4" / 180cm	30
39in. Bug	39 3/8" / 100cm	22	Giant Bug	39 3/8" / 100cm	25

Finally

If you have any further queries please don't hesitate to call us on **800-280-6013** or email us at sales@drytac.com